

INSTRUCTION MANUAL

M-12 lighting console has three operation modes:

- 24 channels + 12 Sub
- 30 channels + 10 Sub + 1 Chaser (20 step)
- 80 channels + 10 Sub + 1 Chaser (20 step)

M-12 console is supplied with electrical power by a Shucko plug. The DMX connection with a male 3 PIN XLR (1st pin is the ground, 2nd is the negative (-) and 3rd is the positive (+)) is placed at the back panel.

In order to choose the preferred mode hold pressed the UP and DOWN buttons and switch on the ON/OFF switch. The display indicates the channel mode, pressing UP / DOWN buttons you can choose between the three modes. To activate the mode press Rec button.

The lighting percentage can be regulated by changing the Master potentiometer's position. The first two digits on the display show the channels that are being used and the next two digits the lighting percentage of the channels. Pressing UP / DOWN buttons you can select the page number (<P 0.1, ..., P0.8>). Pressing UP / DOWN buttons you can choose the number of scenes you want to record (maximum 12 scenes). To complete the procedure press Sub.

In order to check the scenes that you have recorded press the Sub/Enter button and regulate the corresponding potentiometer. To delete the scene you can overwrite it.

M12 can create up to 20 step Chaser. After the lighting settings you can create scenes (SUB) by pressing REC button. On the display appears (first scene). If you press UP/DOWN buttons you can choose the number of the scene you want to record (maximum 12 scenes (SUB)). Press the SUB button to complete the scene recording. Press SUB button and increase the potentiometer to play the recorded scene. Pressing up-down buttons you are able to see how many channels are used in every scene.